



Step 1:

Assemble Sidearms to Rigging at top of the Enclosure.

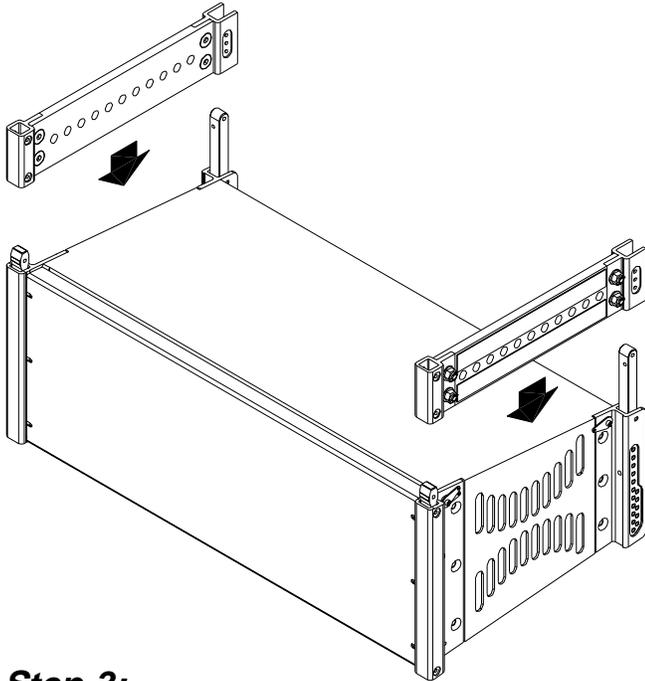


Step 2:

Insert Quick-Release Pins through Enclosure Rigging and Sidearms.

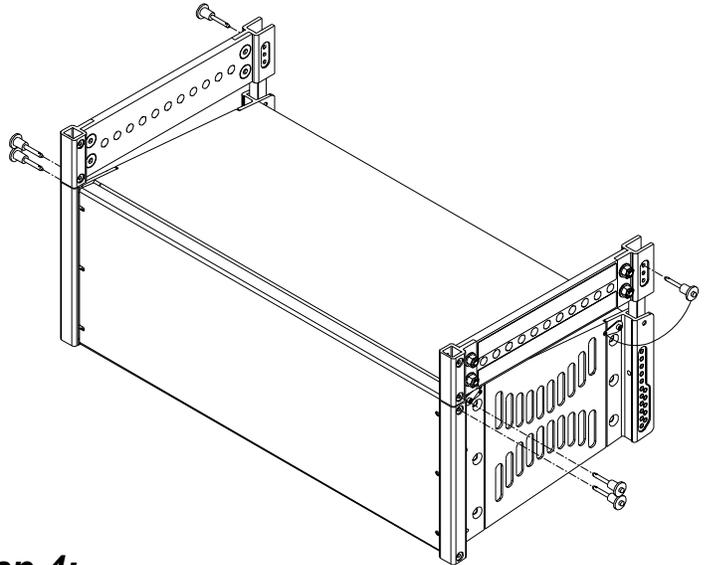

Step 3:


Assemble Spreader Bar(s) to Sidearms.

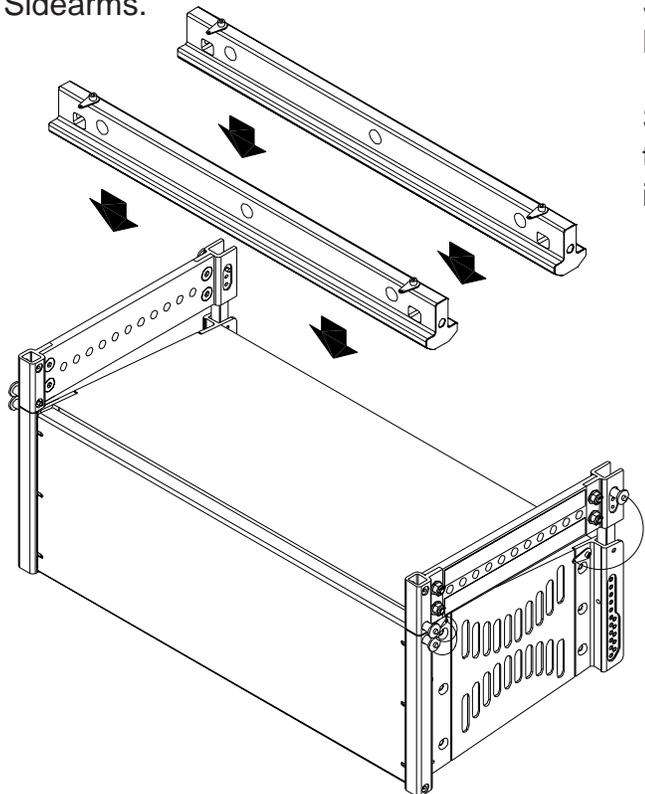


Step 4:

Insert Quick-Release Pins through Sidearms and Spreader Bar(s) using the hole locations from LAPS.

See Page 2 for fully assembled configurations, or the X-Line Very Compact Rigging Manual for more information.

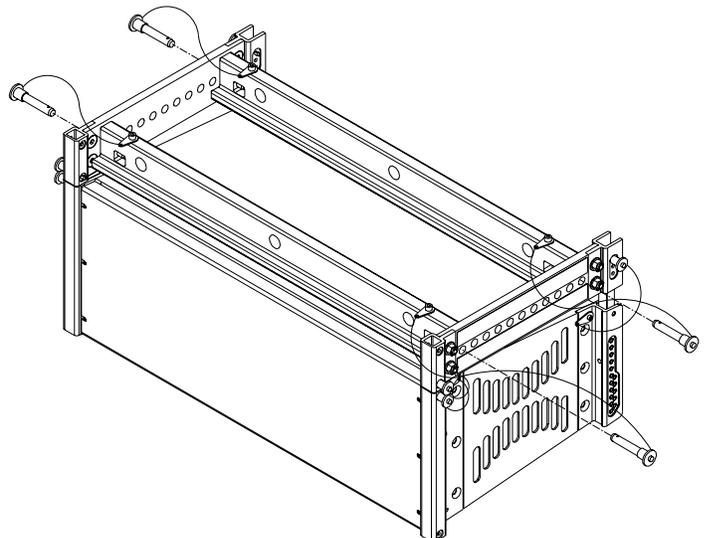

Fully Assembled Configurations:

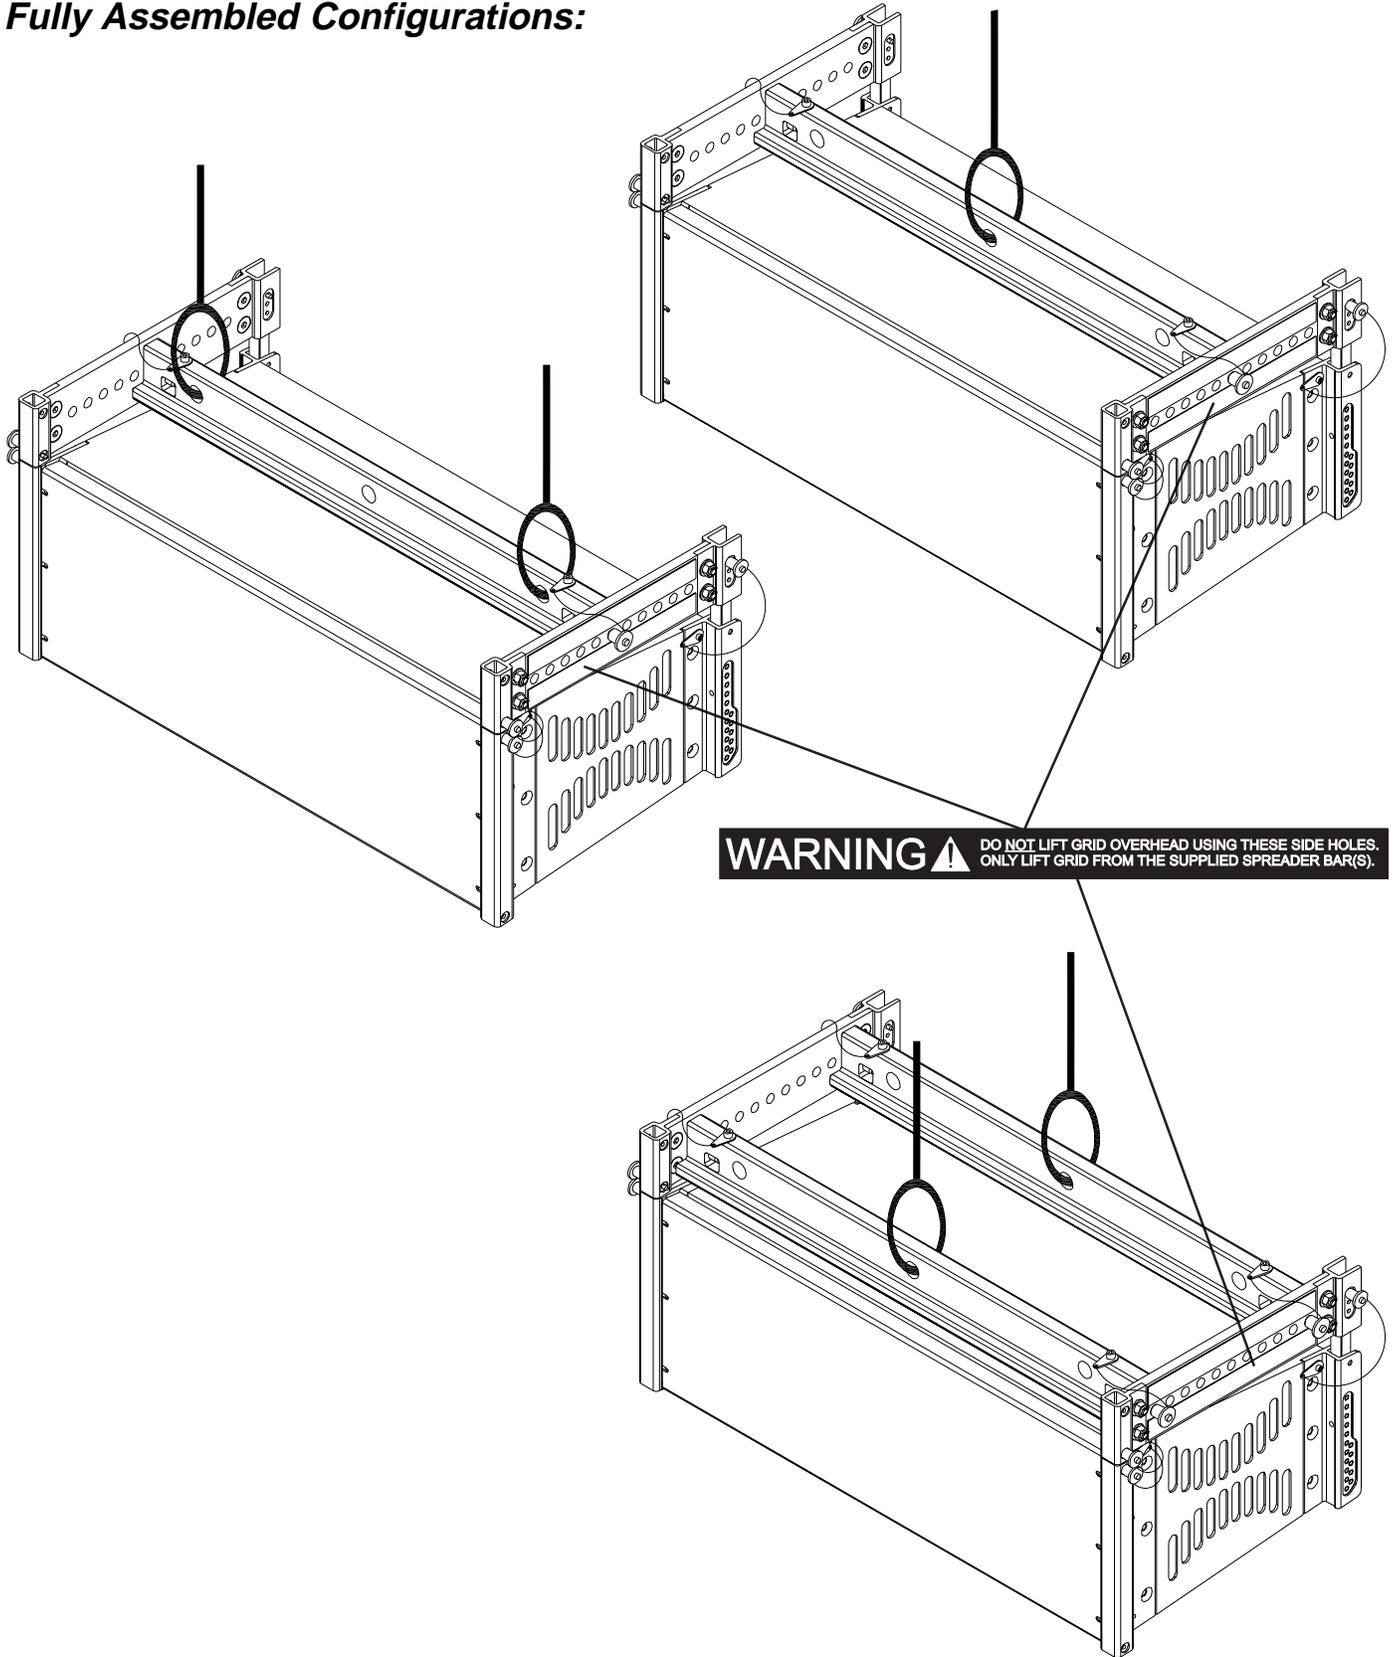

WARNING! DO NOT LIFT GRID OVERHEAD USING THESE SIDE HOLES. ONLY LIFT GRID FROM THE SUPPLIED SPREADER BAR(S).

EV Electro-Voice®

12000 Portland Avenue South, Burnsville, MN 55337
Phone: 952/884-4051, Fax: 952/884-0043

www.electrovoice.com

© Telex Communications, Inc. 2/2005
Part Number 38110-446 Rev A

U.S.A. and Canada only. For customer orders, contact Customer Service at:

800/392-3497 Fax: 800/955-6831

Europe, Africa, and Middle East only. For customer orders, contact Customer Service at:

+ 49 9421-706 0 Fax: + 49 9421-706 265

Other International locations. For customer orders, contact Customer Service at:

+ 1 952 884-4051 Fax: + 1 952 736-4212

For warranty repair or service information, contact the Service Repair department at:

800/685-2606

For technical assistance, contact Technical Support at: **866/78AUDIO**

Specifications subject to change without notice.