

Instruction Sheet

Instructions for setting channel or frequency when using BPU-2, HTU-2, WT-500, or HT-500 microphones with older Electro-Voice or Telex receivers.

1. Turn on the transmitter.
2. Press and hold the down button. After 3 seconds, the software revision (6 digits) will appear. Continue to hold. After 10 seconds, the display will show a flashing RE-2 (or other model No.). Release the button. The illustration below shows the receiver model number and the equivalent transmitter display symbols.

Telex	Electrovoice
FMR-500 = <i>Fmrr5-</i>	RE-2 = <i>rE2.</i>
UR-700 = <i>Ur 700</i>	MR-3000 = <i>mrr 3-</i>
UR-12 = <i>Ur 12</i>	R-200 = <i>r200</i>
FMR-10 = <i>Fmrr 10</i>	N/DYM and NRSCU = <i>ndYm</i>

3. Scroll through the older models (receivers) using the up and down buttons to find your model. Press the set button, the flashing will stop and either a channel number or frequency will appear.
4. Press set and the digits will flash. Use the up and down buttons to select the channel or frequency your receiver is set to. Press set again to finish.

The transmitter is now set to the frequency of your receiver. It will remain set to the frequency that you have chosen even when the battery is changed. It may be reset at any time by following the above procedure.

We recommend that the power switch be disabled to prevent the user from turning off the transmitter. This will produce a pop in your sound system which could be very loud depending on the volume level. See the manual for instructions on disabling the power switch and other features of the transmitter.

Instruction Sheet

Instructions for setting channel or frequency when using BPU-2, HTU-2, WT-500, or HT-500 microphones with older Electro-Voice or Telex receivers.

1. Turn on the transmitter.
2. Press and hold the down button. After 3 seconds, the software revision (6 digits) will appear. Continue to hold. After 10 seconds, the display will show a flashing RE-2 (or other model No.). Release the button. The illustration below shows the receiver model number and the equivalent transmitter display symbols.

Telex	Electrovoice
FMR-500 = <i>Fmrr5-</i>	RE-2 = <i>rE2.</i>
UR-700 = <i>Ur 700</i>	MR-3000 = <i>mrr 3-</i>
UR-12 = <i>Ur 12</i>	R-200 = <i>r200</i>
FMR-10 = <i>Fmrr 10</i>	N/DYM and NRSCU = <i>ndYm</i>

3. Scroll through the older models (receivers) using the up and down buttons to find your model. Press the set button, the flashing will stop and either a channel number or frequency will appear.
4. Press set and the digits will flash. Use the up and down buttons to select the channel or frequency your receiver is set to. Press set again to finish.

The transmitter is now set to the frequency of your receiver. It will remain set to the frequency that you have chosen even when the battery is changed. It may be reset at any time by following the above procedure.

We recommend that the power switch be disabled to prevent the user from turning off the transmitter. This will produce a pop in your sound system which could be very loud depending on the volume level. See the manual for instructions on disabling the power switch and other features of the transmitter.