

## Product registration



 
Register your EVERSE: [electrovoice.com/register](http://electrovoice.com/register)

## Quick setup


To set up the loudspeaker:

Step	Illustration
1. Connect the AC power cord from a grounded receptacle to the <b>MAINS IN</b> to ensure the battery has sufficient charge. <b>Note:</b> It is recommended to leave the loudspeaker plugged in and charging for 24 hours the first time it is used.	
2. Switch power to <b>ON</b> .	
3. Adjust the volume ( <b>VOL</b> ) to 0 dB using the <b>MASTER VOL VOL</b> knob.	
4. Push the input selection soft key for <b>INPUT 1</b> or <b>INPUT 2</b> if using an XLR or ¼-inch (6.35 mm) cable, or push the input selection soft key for <b>INPUT 3/4</b> if using Bluetooth or 3.5 mm mini jack. Use the <b>MASTER VOL</b> knob to adjust <b>INPUT LEVEL</b> to <b>MUTE</b> .	


5. Connect an audio source using an XLR, TRS, or TS cable to **INPUT 1**, **INPUT 2**, or a 3.5 mm mini jack to **INPUT 3/4**. Ensure audio source is **MUTE** or at a low level before making connection. After connection is made, increase the source's output to a reasonable level.

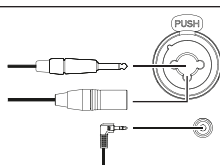

 6. Adjust the **INPUT LEVEL** until the signal peaks are just below maximum level or the required output is achieved. If **PK (PEAK)** is indicated, turn the level down until the **PK** indication disappears. Press the input selection soft key again to exit the channel menu.

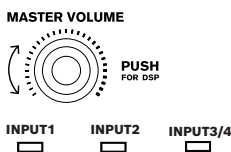

 7. Using the **MASTER VOL** knob, adjust the volume (**VOL**) until you get the required output from the loudspeaker.

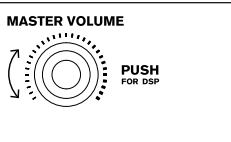

## Using Bluetooth® for audio and control

### Pairing Bluetooth® audio

To place the loudspeaker in pairing mode for audio:

1. Press and hold the input selection softkey to enable pairing mode.  
The message **HOLD FOR PAIRING** displays.

Portable column loudspeaker	Input selection softkey
EVERSE 8 and EVERSE 12	INPUT 3/4

Table 1: Input selection softkeys to enable pairing mode



#### Notice!

The loudspeaker remains in control pairing mode for about five minutes. If control pairing fails, repeat step 1 or clean up your Bluetooth-paired devices list. Find more information and troubleshooting at: <https://go.electrovoice.com/qsm>

2. Wait until **BT PAIRING MODE ON** and the 4-digit ID display on the LCD.

3. On your mobile device's Bluetooth® settings menu, select the corresponding EVERSE loudspeaker with the matching 4-digit ID.

You get a message from your operating system about pairing for each device which has to be accepted.

This pairs the mobile device to the EVERSE loudspeaker for audio streaming.

### Connecting the QuickSmart App for control

The QuickSmart App for tablets and smartphones is available for download from the Apple App Store and the Google Play Store.

Download and check the app for the latest firmware updates to enjoy optimal audio performance and maximize your control of the system.



#### Notice!

The QuickSmart App is designed to only find loudspeakers from Electro-Voice featuring Bluetooth® control functionality. The QuickSmart App does not display other types of Bluetooth® devices, e.g. phones, laptops, tablets, or headsets.

Prior to pairing the QuickSmart App with EVERSE loudspeakers:

- ▶ Make sure that Bluetooth® is enabled on the smartphone or tablet.



#### Notice!

For Android devices running Android version 11 or older, make sure that location services are allowed.

To connect the QuickSmart App for control:

1. Press and hold the input selection softkey to enable pairing mode.

The message **HOLD FOR PAIRING** displays.

Portable column loudspeaker	Input selection softkey
EVERSE 8 and EVERSE 12	INPUT 3/4

Table 2: Input selection softkeys to enable pairing mode



#### Notice!

The loudspeaker remains in control pairing mode for about two minutes. If control pairing fails, repeat step 1 or clean up your Bluetooth-paired devices list.

2. Wait until **BT PAIRING MODE ON** and the 4-digit ID display on the LCD.



3. Open the QuickSmart App.  
All available loudspeakers appear in the **Discovered Speakers** section.
4. Select the loudspeaker or loudspeakers you want to pair.  
The app supports pairing with up to six loudspeakers at a time.
5. Select **Connect**.  
Your mobile device's operating system prompts you to confirm the Bluetooth® pairing request.
6. Select **Pair and connect**.  
Your device then prompts you to synchronize with speaker.
7. Select **Synchronize**.  
The main control screen for a single loudspeaker or for the entire system, if multiple loudspeakers are connected, opens.



#### Notice!

Once connected the app checks for the latest firmware and provides an option to update or delay. Check in advance and update the firmware to the latest version.

## Tripod or pole mount

EVERSE loudspeakers mount on a tripod stand or on a pole above a subwoofer.

### Mounting a loudspeaker on a tripod stand



#### Caution!

Tripod is not evaluated for safety with this loudspeaker. Check the specifications of the tripod stand to be certain it is capable of supporting the weight of the loudspeaker.

 
To mount a loudspeaker on a tripod stand:

1. Place the tripod stand on a level and stable surface.
  - Fully extend the legs on the tripod stand.
  - Do not compromise the tripod stand's structural integrity by trying to make the stand taller.
  - Do not attempt to mount more than one loudspeaker on a stand designed for a single loudspeaker.
2. Lift the loudspeaker using two hands.
3. Set the pole cup located on the bottom of the loudspeaker onto the pole.
4. Set the loudspeaker location to **TRIPOD** in the DSP control menu.

### Mounting a loudspeaker on a pole

To mount a loudspeaker on a pole:

1. Place the subwoofer on a level and stable surface.
2. Insert the M20 threaded pole into the combo pole cup on the top of the subwoofer.
3. Turn the M20 threaded pole clockwise to secure the pole to the subwoofer.

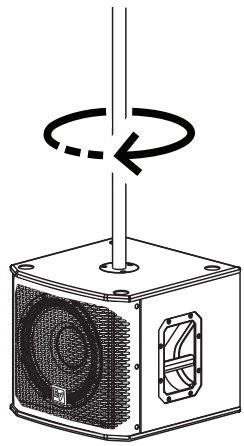

4. Lift the loudspeaker using two hands.
5. Set the pole cup located on the bottom of the loudspeaker onto the pole.
6. Set the loudspeaker location to **TRIPOD** in the DSP control menu.
7. Select the corresponding **SUB (X-OVER)** setting for your subwoofer.




**Notice!**  
Select **LOCATION TRIPOD** in menu or app for best sound.


## Weatherization

 The EVERSE loudspeaker with weatherized input cover installed is intended only for temporary use in wet or damp environments.


- ▶ Use the weatherized input cover when on battery power and when using Bluetooth® streaming and control.

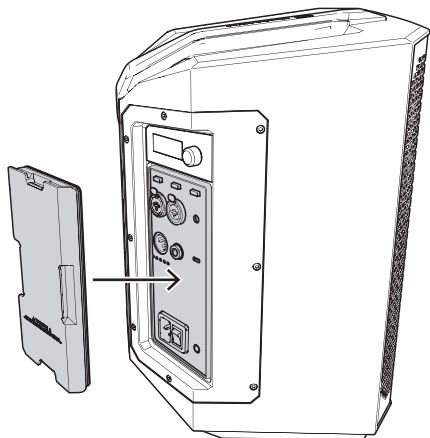

 - ▶ Remove the weatherized input cover by pulling the cover carefully and evenly using the finger pull-tabs.

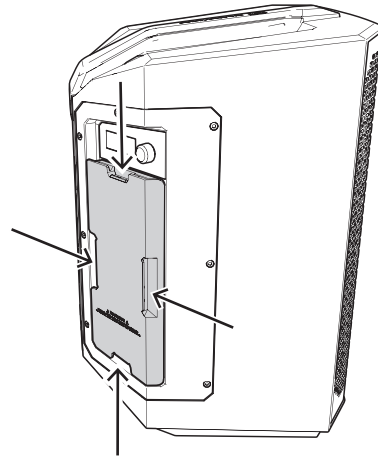

 - ▶ Use the Electro-Voice approved accessory raincover (not included) when on mains power, or when any of the I/O connectors are needed.

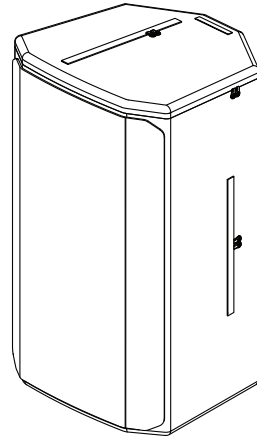


## When using EVERSE loudspeakers in damp or wet environments:

- Always consult the user manual for complete instructions.
- Only use Electro-Voice approved accessories.
- DO NOT place the loudspeaker in a puddle or standing water.
- DO NOT place or transport the loudspeaker upside down, or on the amp panel side.
- DO NOT remove the weatherized input cover or battery pack while wet. Let the speaker dry completely before removing.
- DO NOT attempt to use the loudspeaker in damp or wet environments without the battery installed.

## Warranty information

For information on warranty periods and after sales service, please visit: [www.electrovoice.com/warranty](http://www.electrovoice.com/warranty)
 
## Battery-powered loudspeaker EVERSE 8, EVERSE 12

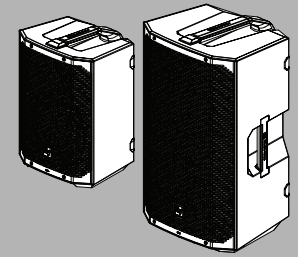

en Quick user guide



**Electro-Voice Dynacord LLC**  
12000 Portland Avenue South  
MN 55337 Burnsville  
USA  
[www.electrovoice.com](http://www.electrovoice.com)  
© Electro-Voice Dynacord 2026

**EU importer:**  
**EVI Audio GmbH**  
Sachsenring 60  
94315 Straubing  
Germany  
© EVI Audio GmbH, 2026

