



To Install HF Bracket Assembly:

- Step 1 - Remove (3) Screws from Enclosure.
- Step 2 - Align holes in bottom of HF Bracket Assembly to threaded holes on top of Bass Cabinet.
- Step 3 - Insert Screw, Washer, and Lockwasher into center hole for pivot point.
(Removing HF Driver may be necessary.)
- Step 4 - Rotate HF Bracket Assembly to desired horizontal and vertical angles.
- Step 5 - Insert two outer Screws, Washers and Lockwashers into outer holes and into nearest threaded holes on top of Bass Cabinet. (If HF Driver was removed, securely screw it back onto horn.)

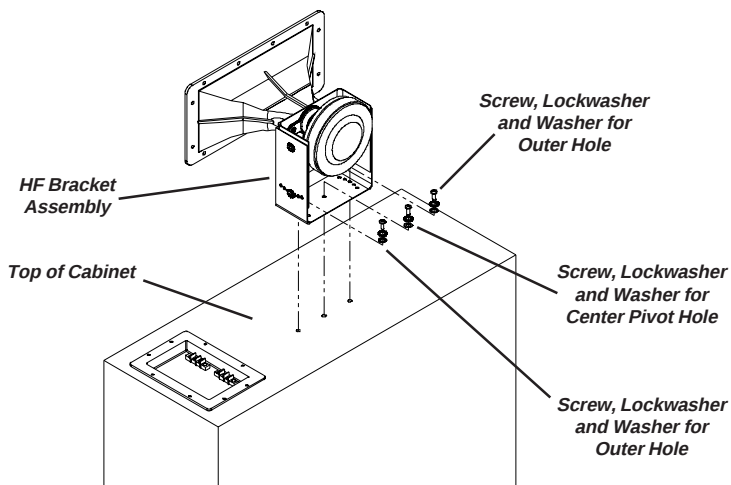

To Hookup Wires from Input Panel to HF Driver and Amplifier:

- Step 1 - Connect to "Input" on input panel from Amplifier
- Step 2 - Connect "Output" on input panel to terminal with corresponding polarity on HF Driver

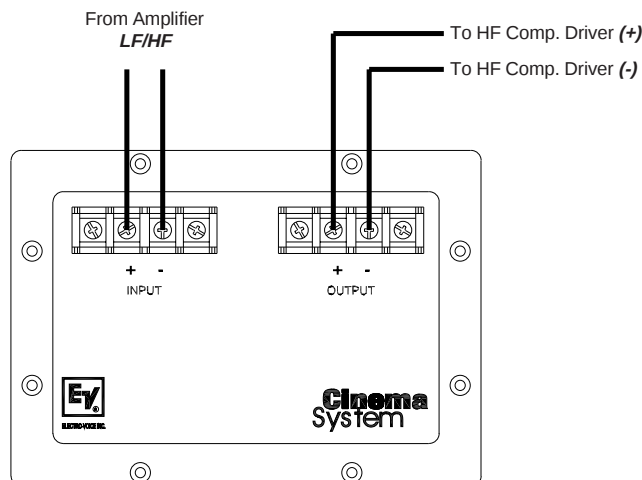

Final Assembly View:

